 



TSK-1900B INTERFACES




PROGRAM



 
END




BT SPP Realtime

 


BT SPP Batch

 

BT HID Realtime

 


BT HID Batch

 


USB Serial
Realtime



 
USB Serial
Batch



USB HID
Realtime

 


USB HID
Batch

 

TSK Dongle
Realtime




 TSK Dongle
Batch



Default

 BT HID PIN CODE



PAIRING



0



1



2



3



4



5



6



7



8



9



ENTER